

Dispositivos compatibles con la Base de Carga Quad Dock

Micro USB

Acer: beTouch E120, beTouch E130, Stream Amazon: Kindle DX, Kindle International
BlackBerry: 8520 Curve, 8900 Curve, Bold 9700, Curve 3G 9300, Pearl 3G, Storm, Storm2, Torch 9800
Google: Nexus One
HTC: Desire, Google Nexus One, HD mini, HD2, Legend, Wildfire
Huawei: G7002
LG: BL20 Chocolate, BL40 Chocolate, Cookie Fresh GS290, Cookie Gig KM570, Cookie Plus GS500, GD510 Pop, GD880 Mini, GM205, GM750, GT350, GT400 Viewty Smile, GT540 Optimus, GW620, GW910, InTouch Max, Town GT350, Viewty Snap GM360, Wink, Wink 3G
Motorola: Backflip, DEXT, Flipout, Milestone, Q9, Quench, RAZR2 V8, RAZR2 V9, ROKR E8, XT720
Nokia: 5630 Xpress Music, 6500 Classic, 7900 Prism, 8600 Luna, 8800 Arte, 8800 Diamond Arte, C1 01, C1 02, C2, C3, E5, E52, E55, N8, N85, N86 8MP, N900, N97, N97 mini, X2, X3 02
Touch And Type, X5 01
Orange: Amsterdam, Boston, Lisbon, Rio
Samsung: B3310, B3410, B5310 Corby PRO, B5722, B7620 Giorgio Armani, B7722, Beam I8520, Beat DISC, Blade, Blue Earth, C3300 Libre, C5510, C6112, Chat B3410W, E2100, E2370, Galaxy, Galaxy 3 I5800, Galaxy Apollo i5801, Galaxy Europa I5500, Galaxy Lite, Galaxy Portal, Galaxy S I9000, Genio PRO, Genio Qwerty, Glamour S5150, Glamour S7070, H1, i5500 Corby, i5700 Galaxy Spica, I8520 Halo, Jet S8000, Jet Ultra Edition, Knox, Lindy M5650, Lucido, M2310, M2510, M3310, M7500 Emporio Armani, M7600 Beat DJ, Miss Player, Monte Bar C3200, Monte S5620, Monte Slider E2550, Omnia HD, Omnia II I8000, Omnia Lite, Omnia PRO 4 B7350, Omnia Pro B7330, Omnia Pro B7610, Pixon12, Player Star, Player Star 2, Preston, S3370, S5150 Diva Folder, S5530, S5560, S5600, S6700, S7070 Diva, S8300 Ultra Touch, Shark 3 S3550, Shark S5350, Tocco Ultra Edition, Wave 2 Pro S5330, Wave 2 S5250, Wave S8500
Sonim: XP2 Spirit
Sony Ericsson: Aspen, Cedar, Hazel, Spiro, Vivaz, Vivaz Pro, X10, XPERIA X10 Mini, XPERIA X10 Mini Pro, Xperia X2, XPERIA X8, Yendo T
Mobile: myTouch 3G Slide, Vairy Text, Vairy Touch II
T-Mobile: Pulse, Pulse Mini
Toshiba: K01, TG01, TG02
Virgin: VM800
Vodafone: 360 H1, 360 M1, 845, M1

Nokia

1200, 1208, 1209, 1616, 1650, 1680 Classic, 1800, 2220, 2323 Classic, 2330 Classic, 2600 Classic, 2630, 2680 Slide, 2690, 2700 Classic, 2710 Navigation Edition, 2720 Fold, 2730 Classic, 2760, 3109 Classic, 3110 Classic, 3110 Evolve, 3120 Classic, 3250, 3500 Classic, 3600 Slide, 3610 Fold, 3710 Fold, 3720 Classic, 5000, 5030, 5070, 5130 XpressMusic, 5200, 5220, 5228, 5230, 5235, 5250, 5300, 5310, 5320, 5330 XpressMusic, 5500, 5530 XpressMusic, 5610, 5700, 5800 Xpress Music, 6070, 6080, 6085, 6086, 6101, 6103, 6110 Navigator, 6111, 6120 Classic, 6124, 6125, 6131, 6136, 6151, 6210 Navigator, 6212 Classic, 6216 Classic, 6220 Classic, 6233, 6234, 6260 Slide, 6267, 6270, 6280, 6288, 6290, 6300, 6300i, 6301, 6303 Classic, 6303i Classic, 6500 Slide, 6555, 6600 Fold, 6600 Slide, 6600i Slide, 6650 Flip, 6700 Classic, 6700 Slide, 6710 Navigator, 6730 Classic, 6760 Slide, 7020, 7070 Prism, 7100 Supernova, 7210 Supernova, 7230 Slide, 7310 Supernova, 7360, 7370, 7373, 7390, 7500 Prism, 7510 Supernova, 7610 Supernova, 8800 Sirocco, C1 00, C5, C6, E50, E51, E51 (No Camera), E61, E61i, E63, E65, E66, E71, E72, E75, E90, N70, N71, N72, N73, N76, N78, N79, N80, N81, N82, N90, N91, N92, N93, N93i, N95, N95 8GB, N96, PT-6, X3, X6

Apple

iPhone 3G, iPhone 3GS, iPhone 4, iPod 3G, iPod 4G, iPod Classic, iPod Color, iPod Mini, iPod Nano, iPod Nano 2G, iPod Nano 3G, iPod Nano 4G, iPod Photo, iPod Touch, iPod Touch 2G, iPod Video

Mini USB

3: INQ Chat 3G, INQ Mini 3G, INQ1, Skypephone, Skypephone S2, Skypephone S2x, ZTE F102, ZTE F107 Acer: Acer beTouch E100, beTouch E110, beTouch E200, beTouch E400, neoTouch, neoTouch P300, neoTouch P400 BlackBerry: 7100t, 7100v, 7100x, 7130v, 7230, 7290, 8100 Pearl, 8110 Pearl, 8120 Pearl, 8130 Pearl, 8300 Curve, 8310 Curve, 8320 Curve, 8700f, 8700g, 8707v, 8800 Pearl, 8820, Bold Google: G1 Android, Ion HP: hx2100, rw6815 HTC: Advantage, Hero, Magic, MTeoR, P3300, P3350, P3400, P3470, P3600, P4350, P6500, S310, S620, S710, S730, S740, Smart, Snap, Tattoo, Touch, Touch 3G, Touch Cruise, Touch Diamond, Touch Diamond2, Touch Dual, Touch HD, Touch Pro, Touch Pro2, Touch Viva, Touch2, TyTN, TyTN II Huawei: U7510 i-mate: JAM, JAMin, JASJAM, JASJAR, K-JAM, SP3, SP3i, SP5, SP5m, SPL JCB: TOUGHPHONE Land Rover: S1 LG: KT770 MDA: Basic Motorola: A910, EM330, KRZR K1, KRZR K3, L2, L6, MOTO Z10, PEBL U6, Q, RAZR maxx, RAZR V3, RAZR V3xx, RIZR, RIZR Z8, ROKR Z6, SLVR L7, V230, V3i, V3x, W231, W375, W377, Z6w O2: XDA Atmos, XDA Diamond, XDA Graphite, XDA Ignito, XDA IQ, XDA Mini S, XDA Orbit, XDA Orbit 2, XDA SP, XDA Stellar, XDA Trion Orange: C550, M3000, M3100, M500, M5000, M700, SPV C500, SPV C600, SPV C700, SPV E650, SPV M600 Palm: Treo 500v Qtek: 8300, 8310, 8600, 9000, 9100, 9600, S200 Sagem: my401C, my501c Sonim: XP1 T-Mobile: Ameo, Dash 3G, G1, G2 Touch, MDA Compact, MDA Compact II, MDA Compact III, MDA Compact IV, MDA Mail, MDA Pro, MDA Touch, MDA Vario, MDA Vario II, MDA Vario III, MDA Vario IV, MDA Vario V, myTouch 3G, SDA, Touch Plus, Vairy Touch Vodafone: v1415, v1605, v1615, v1640, VPA Compact Sonim: XP1 T-Mobile: Ameo, Dash 3G, G1, G2 Touch, MDA Compact, MDA Compact II, MDA Compact III, MDA Compact IV, MDA Mail, MDA Pro, MDA Touch, MDA Vario, MDA Vario II, MDA Vario III, MDA Vario IV, MDA Vario V, myTouch 3G, SDA, Touch Plus, Vairy Touch Vodafone: v1415, v1605, v1615, v1640, VPA Compact

Sony Ericsson

Aino, C510, C702i, C901, C902, C903, C905, D750i, Elm, F305, G502, G700, G705, G900, J100i, J110i, J120i, J220i, J230i, Jalou, K200i, K220i, K310i, K320i, K330, K510i, K530i, K550i, K610i, K630i, K660i, K750i, K770i, K790i, K800i, K810i, K850i, M600i, Naite, P1i, P990i, R300, R306, S302, Satio, SE S500i, SE Z320i, T250i, T270i, T280i, T303, T650i, T700, T707, T715, V630, V640i, W200i, W205, W300i, W302, W350i, W380i, W395, W508, W550i, W580i, W595, W610i, W660i, W700i, W705, W710i, W715, W760i, W800i, W810i, W850i, W880i, W890i, W900i, W902, W910i, W950i, W960i, W980i, W995, Xperia Pureness, Yari, Z250i, Z310i, Z520i, Z530i, Z550i, Z555i, Z558i, Z610i, Z710i, Z750i, Z770i, Z780i, Zylo

Samsung

B210, B2100 Solid Extreme, B2700, B300, B3210 Corby TXT, B510, C3510, C5212, C6625, D880 DuoS, D980 DuoS, E1120, E1360B, E2120, E215, F110 MiCoach, F200, F210, F250, F400, F480 Tocco, F490, F700, G600, G800, Genio Slide, Genio Touch, i200, I550, i7110 Pilot, i780, i900 Omnia, J700, L760, L770, M110 Solid, M150, M200, M310, M3200 Beat S, M3510 Beat B, M8800 Pixon, Omnia Pro B7320, Omnia Pro B7330, P260, P520 Armani, Qbowl, Rocky E1130, S3100, S3500, S3600, S3650 Corby, S5200 Slide, S5230 Star, S7330, S9110, Shark 2 S5550 , Tobi, Tocco Lite, U800 Soul b, U900 Soul, Z720

LG

Arena, F2250, GB102, GB220, GC900 Viewty Smart, GD910, GM730, GT500 Puccini, GW300, GW550, KC550 Orsay, KC560, KC780 Reina, KC910 Renoir, KE800 Chocolate Platinum, KE820, KE850 Prada, KE970 Shine, KF300, KF310, KF350, KF510, KF600 Venus, KF700 Virgo, KF750 Secret, KF757 Secret, Kf900 Prada II, KG320, KG800 Chocolate, KG810, KP100, KP170, KP500 Cookie, KP501 Cookie, KS20, KS360, KS500, KT770, KU990 Viewty, KU990i, Viewty Lite