


# Chocolate camera

mini toy digital camera

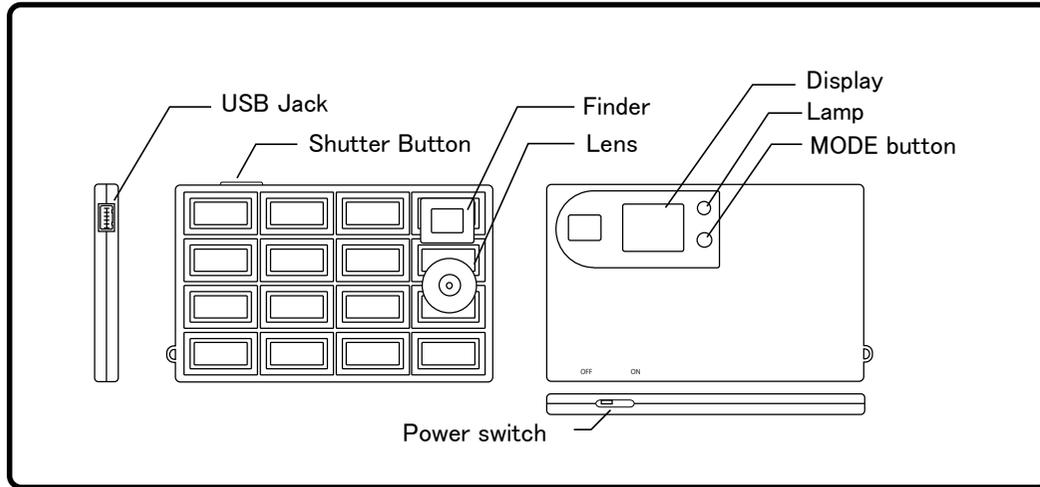

## How to Charge your Battery

(Your camera is loaded with a chargeable battery.)

Turn the main power switch at the bottom of your camera ON.

※ When you charge your battery, you must switch the main power ON.

You may not be able to charge your battery if the main power is turned OFF.

① Connect your camera and your computer with the USB cable attached.  
→ A red lamp will be lit when the charging starts.

② A green lamp will be lit indicating that the charging is completed.  
You will need 1 ~ 2hours to complete charge your battery full.

※ Time required charging your battery full differs depending on the model and setting of your computer.

※ The display on the LCD monitor will flash to let you know when your battery power is low.

### [Notice]

When your battery is dead, or the main power is switched OFF. All data of your photographs will be deleted.

When switching the main power OFF, save the data in your camera beforehand.

## How to Take Photographs

① Turn the main power switch ON at the bottom of your camera.

② Press the function button. You will hear a peeping sound, and the number of photographs taken will be displayed.

③ You will be able to take a photograph by pressing the shutter button.

You will hear a peeping sound, and the number of photographs displayed on the LCD monitor will increase.

※ When it is too dark to take a photograph, you will hear two peeping sounds, and you will not be able to take your photographs. Try taking your photographs in a lighter place.

## Camera Functions

You can switch the functions by a MODE button



### Mode for taking photographs

The number of photographs recorded will be displayed on your camera. Initial setting will be displayed as 「000」.

※ The present setting mode is shown on the left. ( HI/LO )



### Power OFF mode

When you press the shutter button in this mode, you will be able to switch the power off. If your camera is left untouched for 30 ~ 60 seconds after the power is switched on, it will automatically be switched off.



### Mode for taking photographs using the self timer

When you press the shutter button in this mode, you will hear short peeping sounds indicating the timer, and a photograph will be taken after 10 seconds.



### Mode for filming movies

When you press the shutter button in this mode, you will hear repeating peeping sounds, and your movie will be saved. (The sound will not be saved.) Filming will end automatically if you release the shutter button, or the data memory is full.



### Continuous photographing

When you press the shutter button in this mode, 3 photographs will be taken continuously.



### Deleting all data

When you press the shutter button twice in this mode, all data will be deleted.

**[Notice]** You will not be able to recover the deleted data.



### Deleting one image

When you press the shutter button in this mode, the image taken the latest will be deleted.



### High resolution mode / Low resolution mode

When you press the shutter button in "HI" displayed, your camera will be switched to a mode for large image size. When you press the shutter button in "LO" displayed, your camera will be switched to a mode for small image size.



### Low resolution mode

Your camera will be switched to a mode for small image size. If your camera is already on the low resolution mode, it will not be displayed.



### Low compression mode

High definition  
If your camera is already on the low compression mode, it will not be displayed.



### High compression mode

Low definition  
If your camera is already on the high compression mode, it will not be displayed.

### Number of photographs on the resolution mode and compression mode

	Low compression	High compression
High resolution mode Hi 640×480	Ld 25 枚	Hd 76 枚
Low resolution mode Lo 320×240	100 枚	275 枚

※ The initial setting will be high resolution × low compression 25.  
We recommend using your camera in this setting.


## ❖ How to Review your Images

You need to install the application in your computer, in order to forward the data of your images to your computer.

You need a computer installed with one of the following OS : Windows2000, XP, Vista, 7, and a CD-ROM drive in order to install the software.

### ■ How to Install the Application


Insert the attached CD to the CD drive of your computer, in order to install the application.

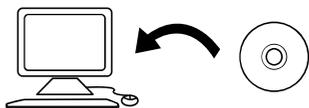

### ■ How to Download your Photograph / Movie Data

1. Connect your camera and your computer with the USB cable attached.


※ The application must be installed before the connection.

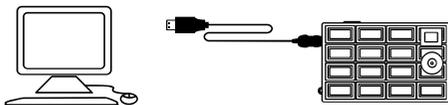

2. Open the [MyDSC2] folder produced on your desktop, and start the program by double clicking (MyDSC2).

3. Click the [Image downloading button], and download your photograph / movie data.

You will be able to enlarge the image by right clicking the photographs you want to see.

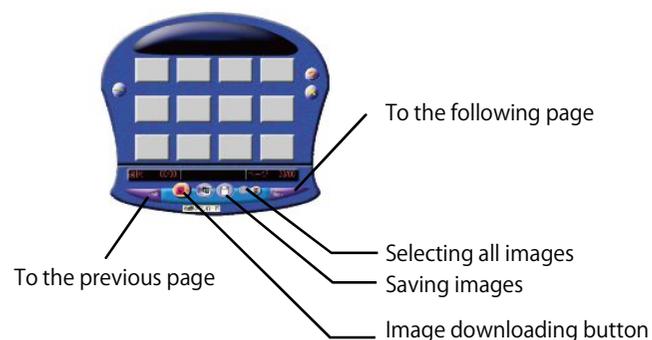

### ■ How to save your Photograph / Movie Data

Select the photograph / movie data you want to save (your choice will be marked in a red frame), click the image saving button in order to save your data in your computer.

※ You will be able to select all photograph / movie data by clicking the [selecting all images] button.